

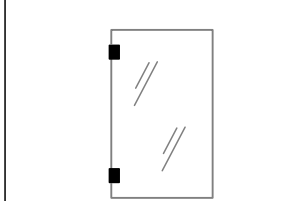


BOX DOCIA


8500N

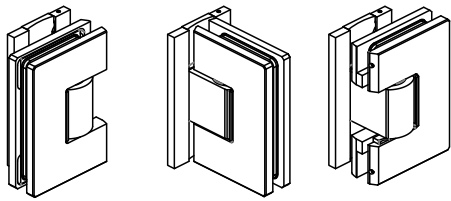

Tools required

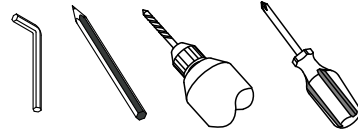


Fittings required

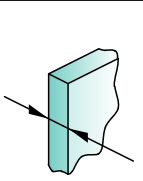


6-8-10

GLASS







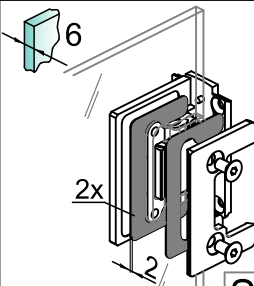


2x

SEALS


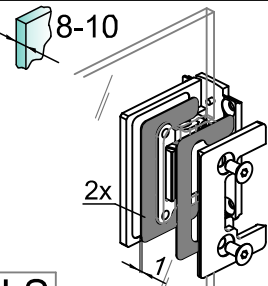


2x

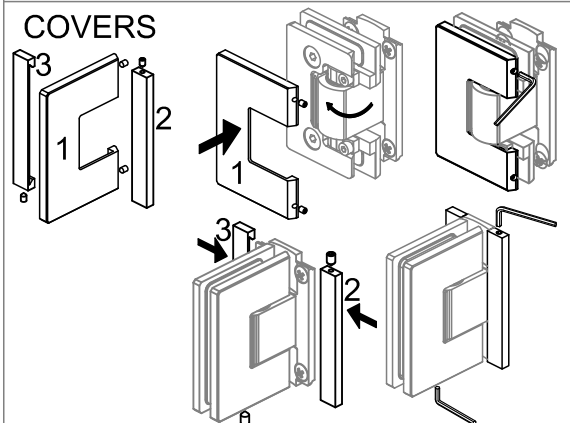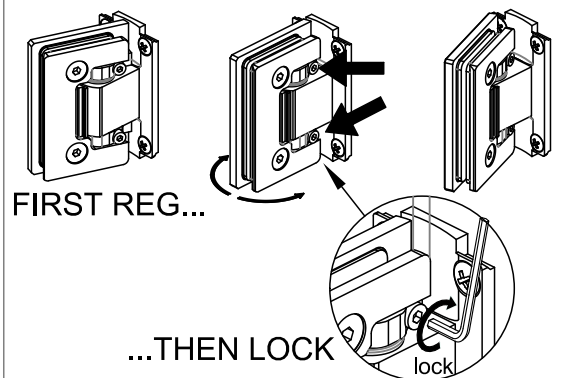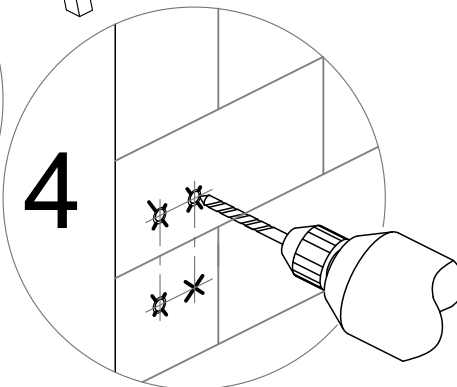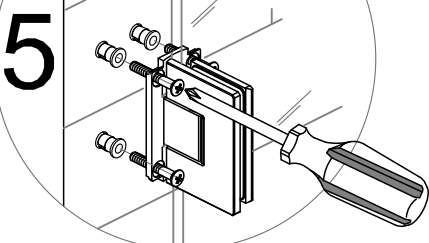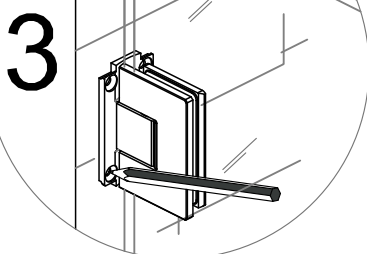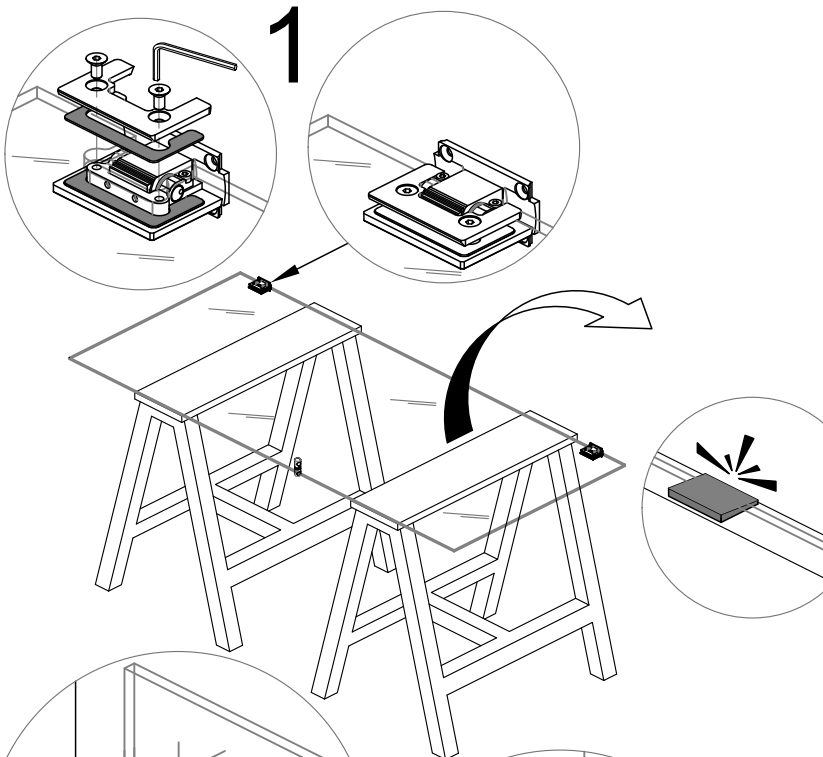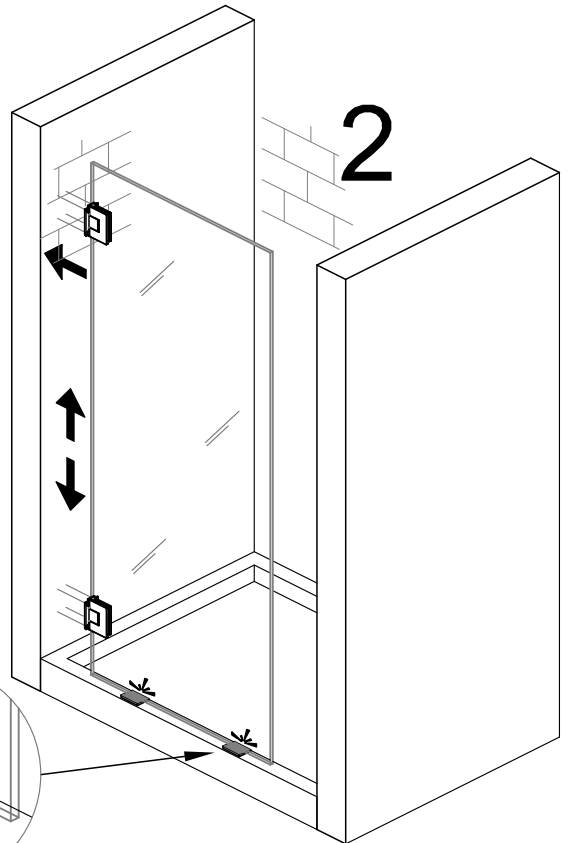


BOX DOCIA


8501N

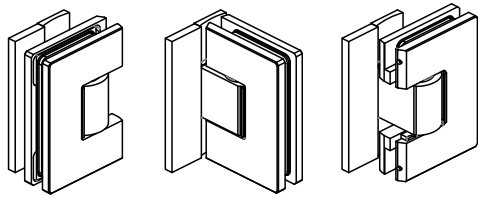

Tools required

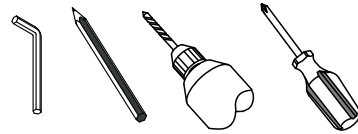


Fittings required







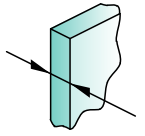


6-8-10


GLASS

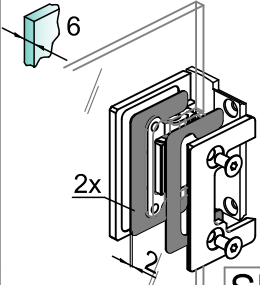

SEALS

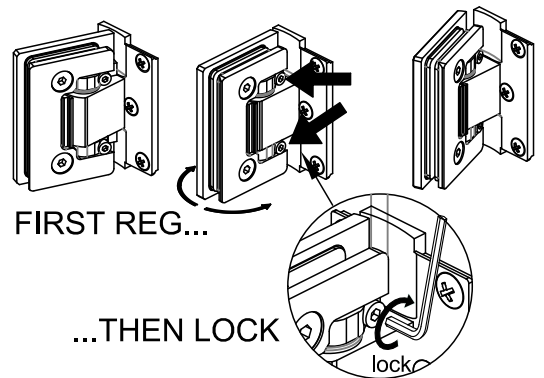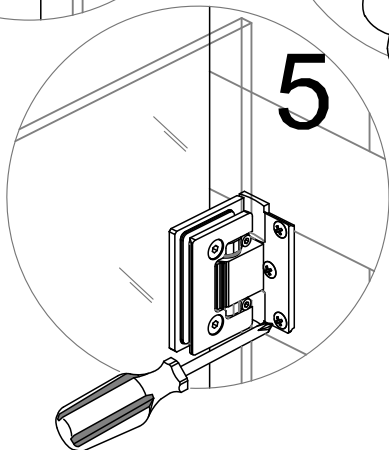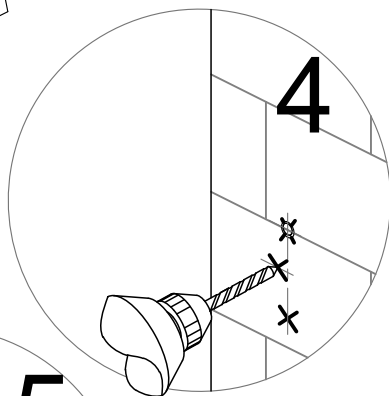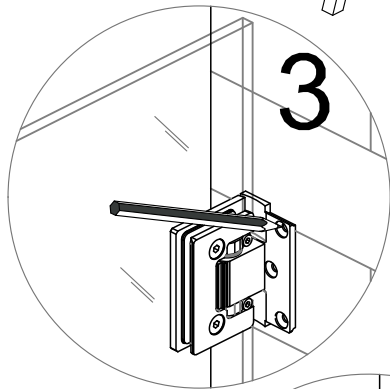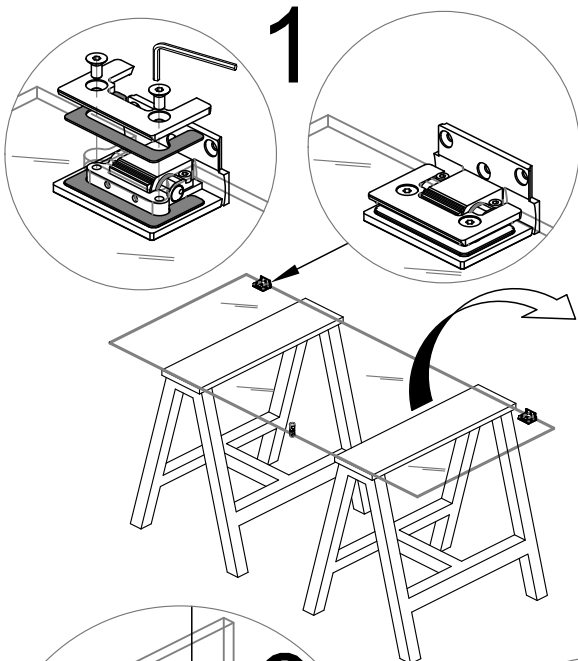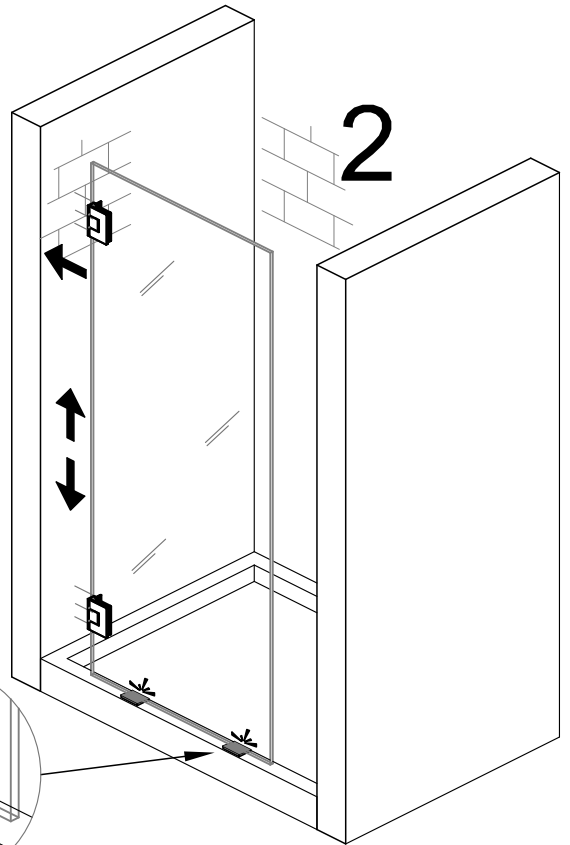
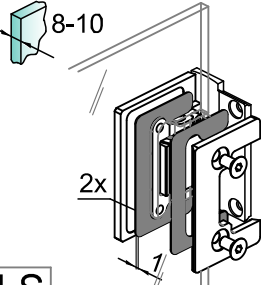


COVERS

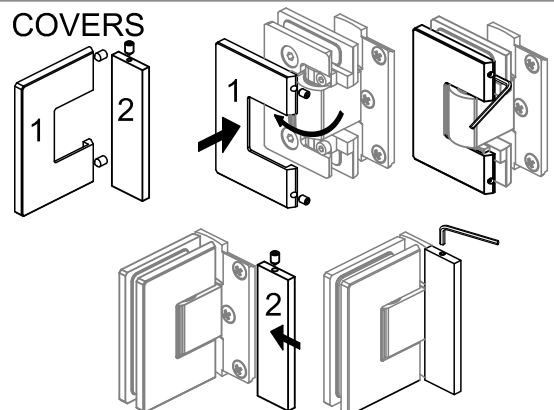


BOX DOCCIA

8505N

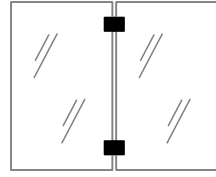
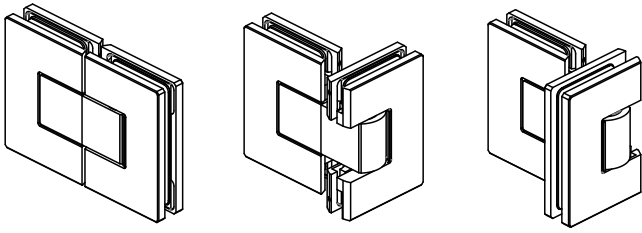


6-8-10

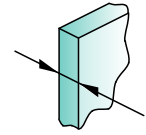

GLASS


Tools required

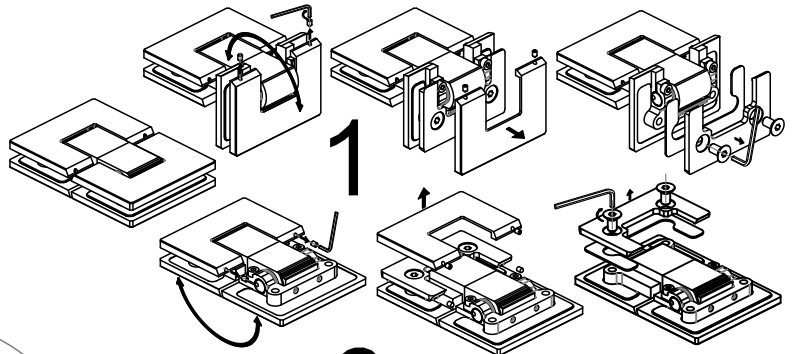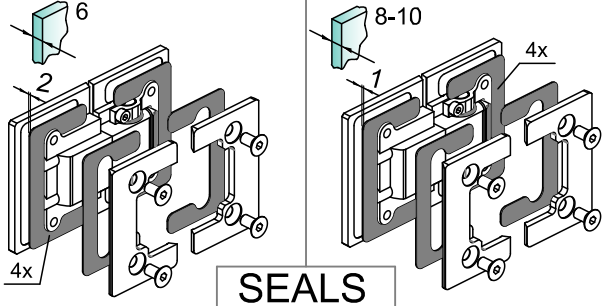


1

3

COVER 1

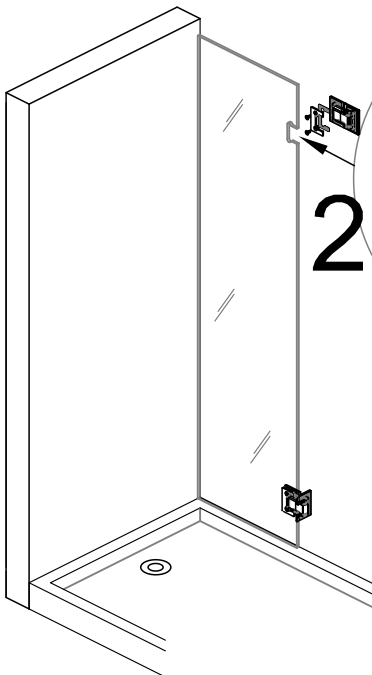



2

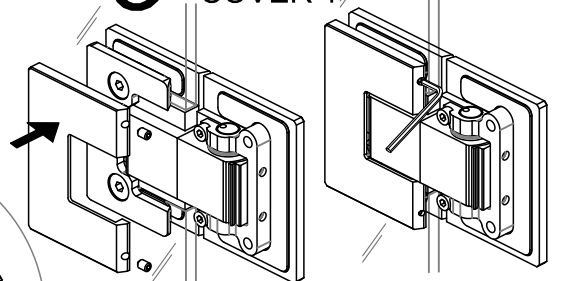

FIRST REG...

...THEN LOCK

5

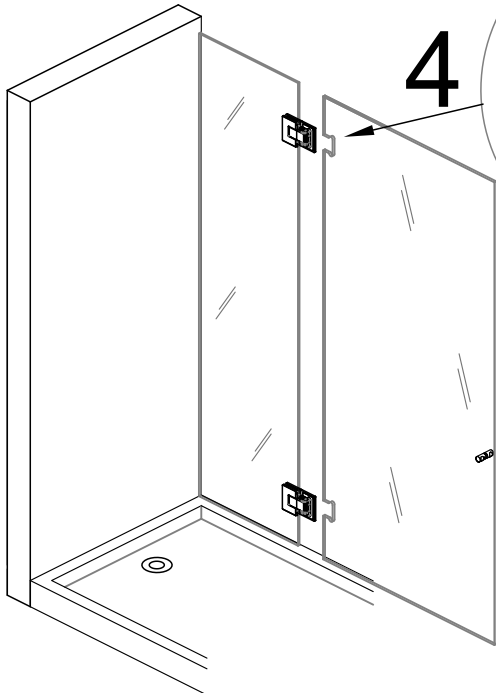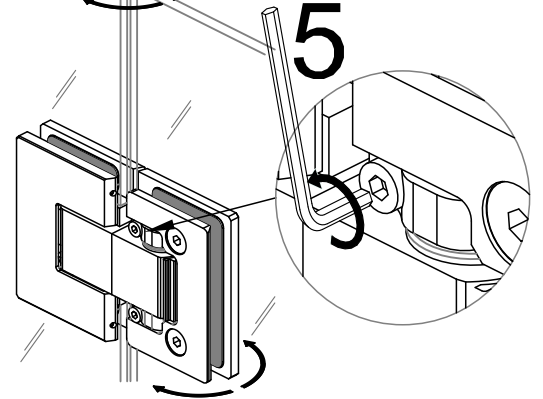

4

COVER 2

6

